



CommBox Invisible Motorised Wall Bracket User Manual


Introduction

The CommBox Motorised In-Wall Bracket is a virtually invisible motorised wall bracket that is hidden inside the wall. It is designed to work with both the CommBox range of screens and many others on the market. It mounts between the studs inside the wall allowing support for heavier screens and features 500mm of motorised vertical height adjustment.

This guide is intended for end users who are using a stand that is fully setup ready for use with the screen already installed. The guide explains how to operate the motorised lift feature.

Motorised Height Adjustment (Using Wall Buttons)

These instructions cover operation using the Clipsal Iconic Wallplate supplied with the bracket. Press and hold each of the rocker style buttons to move the stand up and down. Release to stop moving. Whilst the buttons can be configured in many ways by your installer, the standard layout has the down button on the left with the horizontal bar at the bottom of the button, and the up button on the right with the bar at the top.

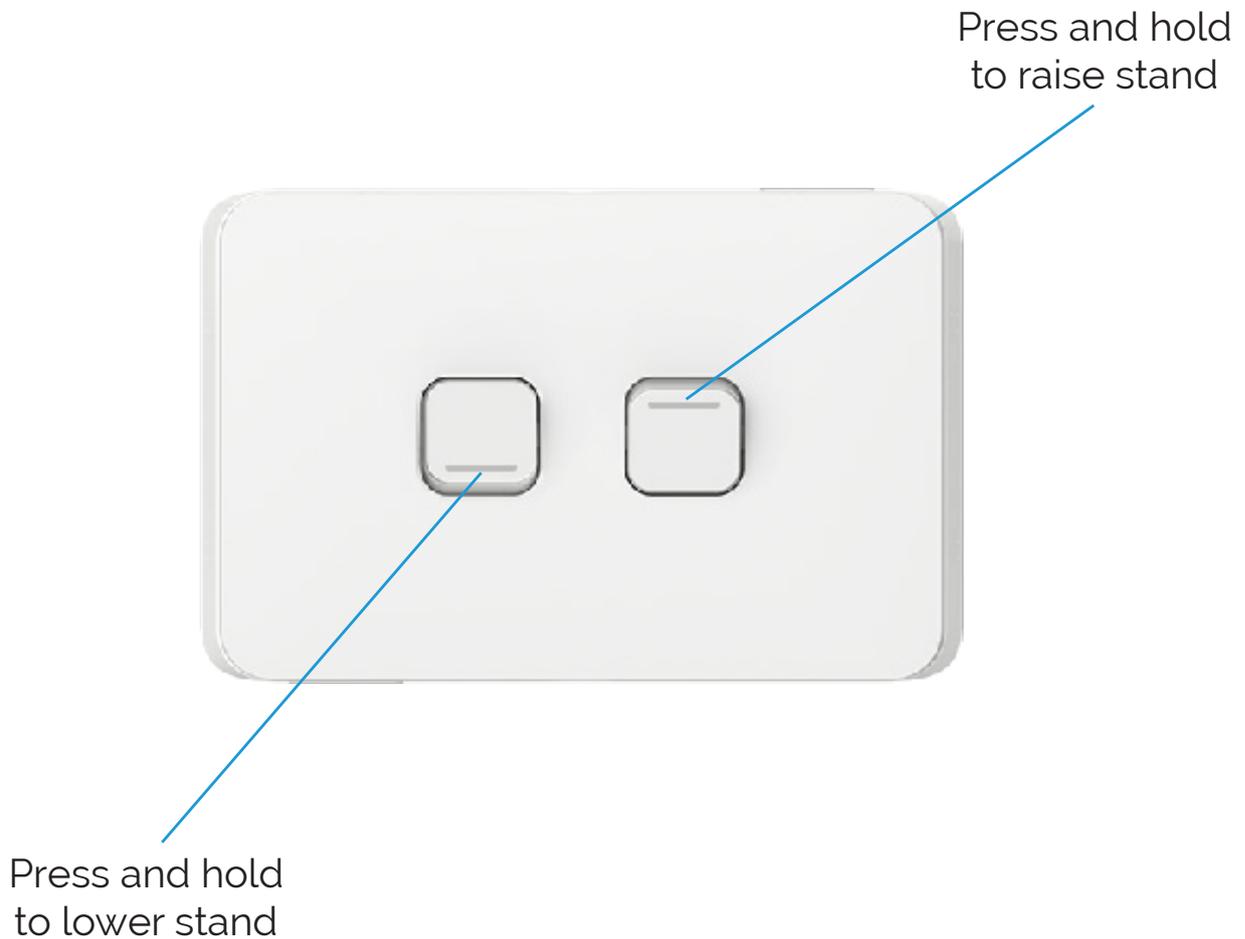


Motorised Height Adjustment (Using CommBox Control Hub)

This applies when a CommBox Control Hub is installed. Use the Up and Down buttons on the touch interface to move the stand up and down. The stand will keep moving while the button is held, and will stop moving when the button is released.

Press and hold
to raise stand

Press and hold
to lower stand

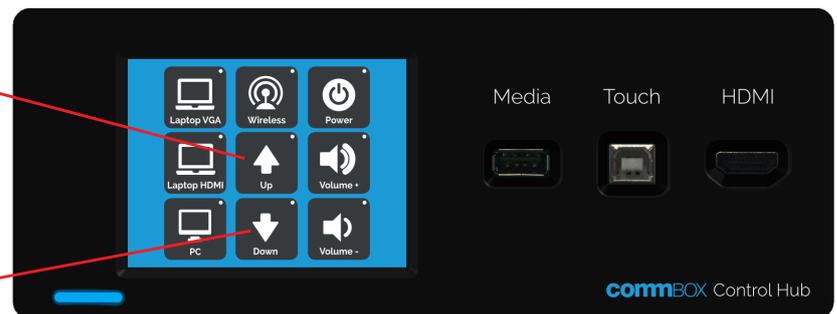

WARNING:

The stand will automatically stop moving at the upper and lower limits, but you should always take care to watch for obstructions and manually stop the stand by releasing the button in the event of a collision.

